


Flow Setting Instructions

The ball valve in the flow meter completes a full range of motion in one quarter turn.



Full ON

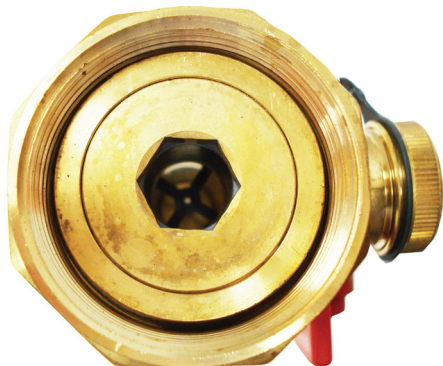

Top View

USE ONLY A 4 mm ALLEN KEY TO ADJUST THE FLOW

Full ON ----- Hash marks at 12:00 and 6:00
(inline with the axis of the pipe)

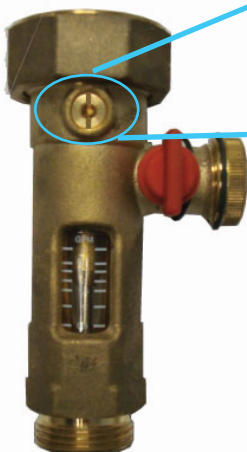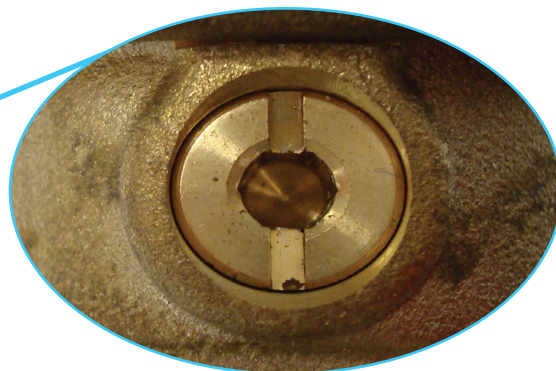

Front View

Full OFF



Top View

Full OFF ---- Hash marks at 9:00 and 3:00
(inline with the diameter of the pipe)



Front View

